

1. Main switch

Start heating the appliance by pressing the main switch to position 1. The heater begins to warm up immediately. The heater will remain on for the time selected by means of the DIP switches, unless the heating is stopped earlier by pressing the main switch to position 0.

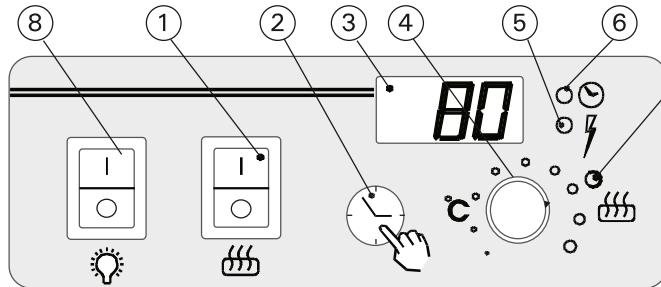


Figure 1. Control unit: switches and indicator lights
Abbildung 1. Schalter und Kontrolllampen der Steuereinheit

2. Pre-set Time Button

When using pre-set time to switch on the heater after a pre-set period of time, the time setting button is pressed until the required digital number of hours is displayed. The pre-set time can be programmed between 30 min–12 hours at an accuracy of thirty minutes. The pre-set time can be discontinued by programming 0 on the screen, whereupon the heater starts to warm up immediately.

When the pre-set time is programmed, the heater is switched off for the pre-set time.

The pre-set time shortens at intervals of 6 minutes.

3. Display

In normal mode, the sauna temperature is displayed numerically within a degree of accuracy of one degree.

4. Temperature adjuster

The desired bathing temperature is set by using the temperature adjuster. When turned clockwise, the temperature will rise, and when turned anti-clockwise, the temperature will fall. When the regulator is turned in either direction, the screen will automatically display the set temperature in numbers and the indicator light 5 will flash.

The maximum temperature that can be set is 110 °C.

5. Signal light, red

When the signal light is on continuously, the display shows the temperature of the sauna.

When the signal light is blinking, the display shows the setting temperature.

6. Signal light, green

The signal light is on: the display shows the set pre-setting time.

7. Signal light, red

The signal light is on: the heater is on.

8. Sauna light switch, max 100 W

NOTE! Make sure that the control unit of the heater has cut off power from the heating elements after the set time has elapsed.

The person in charge of the installation of the control unit should deliver the instructions for installation and for use with the heater and give the necessary user training for the person attending the heater and the control unit before installation is completed!

1. Hauptschalter

Die Inbetriebnahme des Saunaofens erfolgt durch Drücken des Hauptschalters in Position 1. Der Ofen beginnt sofort zu heizen und bleibt für die mit den DIP-Schaltern gewählte Zeit in Betrieb, falls er nicht vorher ausgeschaltet wird (Position 0).

2. Vorwahlzeit-Schalter

Falls der Zeitpunkt für das automatische Einschalten des Ofens festgelegt werden soll, ist die Zeitvorwahlstaste so oft zu drücken, bis die gewünschte Stundenzahl auf der Anzeige erscheint. Die Vorwahlzeit ist von 0,5–12 Stunden mit halbstündiger Genauigkeit programmierbar. Die Zeitvorwahl kann durch die Anzeige 0 rückgängig gemacht werden, wonach der Ofen sofort mit dem Heizen beginnt.

Wenn die Vorwahlzeit programmiert wird, schaltet sich der Ofen bis zur angegebenen Zeit automatisch aus.

Die Vorwahlzeit läuft in Schritten von 6 Minuten ab.

3. Anzeige

Zeigt im Normalfall die Temperatur in der Sauna numerisch mit einer Genauigkeit von einem Grad an.

4. Temperaturregler

Die gewünschte Saunatemperatur wird mit dem Temperaturregler eingestellt. Rechtsdrehung erhöht, Linksdrehung verringert die Temperatur. Wenn der Regler nach rechts oder links gedreht wird, erscheint auf der Anzeige automatisch der Zahlenwert der eingestellten Temperatur und die Leuchte 5 blinkt.

Die Temperatur kann auf maximal 110 °C eingestellt werden.

5. Kontrolleuchte, rot

Bei fortwährender Leuchte erscheint auf der Anzeige die Saunatemperatur.

Bei Blinken der Leuchte zeigt das Display die Einstellungstemperatur an.

6. Kontrolleuchte, grün

Gibt an, dass auf der Anzeige die Vorwahlzeit angegeben ist.

7. Kontrolleuchte, rot

Leuchtet, wenn der Saunaofen eingeschaltet ist.

8. Schalter für Saunabeleuchtung, max 100 W

ACHTUNG! Es ist unbedingt darauf zu achten, dass das Steuergerät der Sauna nach Beendigung der Heizzeit die Stromwiderstände des Ofens abschaltet.

Der für die Installation des Steuergeräts verantwortliche Monteur hat dem Benutzer vor Übergabe seiner Arbeit die Einbauvorschriften und die Bedienungsanleitung des Saunaofens auszuhändigen und gegebenenfalls Benutzungshinweise für Ofen und Steuergerät zu geben!